

**MB&F**

**HOROLOGICAL LAB**

**LM101**

## **LM101**


FUNCTIONS

**05**

OPERATING INSTRUCTIONS

**07**

LM101

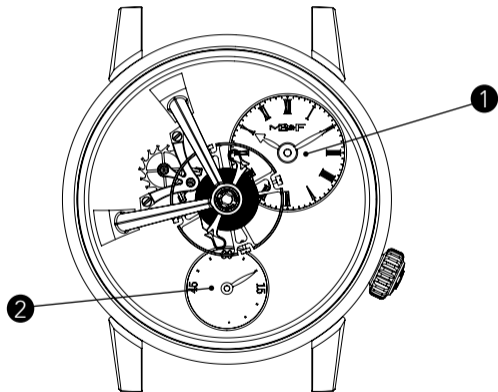

## FUNCTIONS

- ① Hours and minutes
- ② Power reserve indicator

LM101

## OPERATING INSTRUCTIONS

### WINDING

Your watch is equipped with a manual winding movement. If it has stopped, wind the crown in position In **(A)** till the maximum 48 hours power reserve capacity **(C)**.

### TIME SETTING

Crown position Out **(B)**: Turn the crown to set the time. Slide the crown back against the case when finished.

