

**MB&F**

**HOROLOGICAL LAB**

**Legacy Machine N°2**

## Legacy Machine N°2

Functions

05


Operating instructions - Winding

07

Operating instructions - Time setting

07


## Legacy Machine N°2

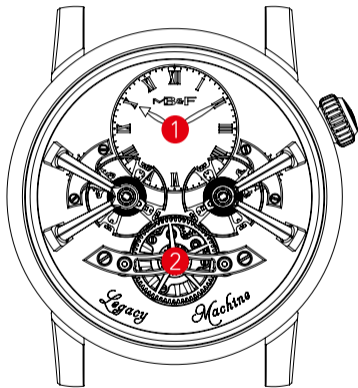

## Functions

- 1 Hours and minutes
- 2 Planetary differential transmitting the average rate of the two regulators to the single gear train

## Legacy Machine N°2

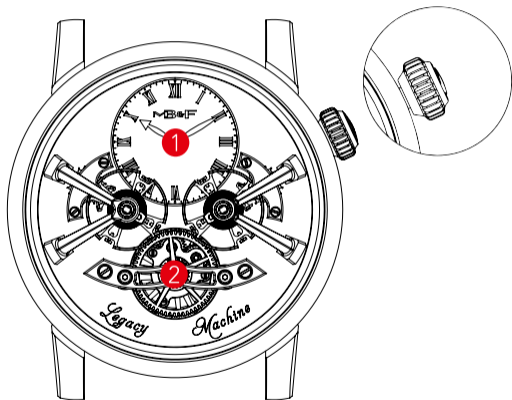

### Operating instructions - Winding

Your watch is equipped with a manual winding movement, offering approximately 45 hours of power reserve. To wind it, keep the crown in position "in"; gently revolve the crown until you reach the maximum power reserve capacity (the crown will not turn more).

07

### Operating instructions - Time setting

Pull crown to position "out" and turn the crown to set the time. Push the crown back against the case when finished.

