

M B & F

LM Split Escapement EVO

Congratulations on your purchase!

You are the proud owner of a high complication timepiece by MB&F.

Split escapement mechanisms are complex, so please read these instructions carefully before operating your timepiece.

LM Split Escapement EVO

Functions

Operating instructions - Winding

Operating instructions - Time setting

Operating instructions - Date setting

07

09

11

13

LM Split Escapement EVO



Functions

- 1 Date
- 2 Power reserve indicator
- 3 Hours and minutes

LM Split Escapement EVO



Operating instructions - Winding

Your watch is equipped with a manual winding movement.

If it has stopped, wind the crown in the “In” position (B), until you reach the maximum power reserve capacity as shown by the power reserve indicator (2).

LM Split Escapement EVO




Operating instructions - Time setting

Pull the crown to the "Out" position, and turn the crown to set the time. Push the crown back against the case when finished.

The hands can be turned forwards or backwards at any time, but it is best to avoid moving them back through more than 20 hours.

LM Split Escapement EVO

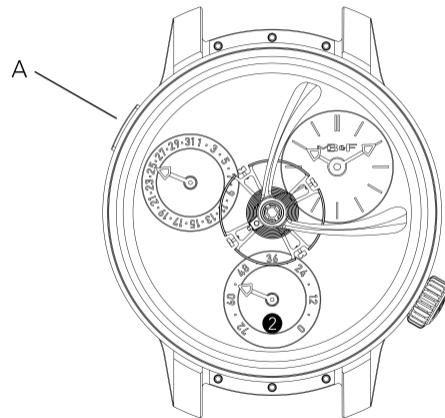

Operating instructions - Date setting

Be careful to never apply excessive force to the corrector; only use your fingers and no other tools which could not only force the movement, but also slip and scratch the case. Push the corrector (A) to advance the date by 1 day each time you press. An easy solution to set the date after the watch has stopped is to set the date one day before and advance the hours and minutes hands forward to have the date advance to the next day.

Warning: It is strongly recommended not to make the date correction between 9 p.m. and 3 a.m. The date mechanism is engaged during this period and operation might damage the mechanism.

