MBEF

 
HOROLOGICAL MACHINE N'4

HOROLOGICAL MACHINE N°4

Functions

Operating instructions

HOROLOGICAL MACHINE N°4




Functions

05

- 1. Hour
- 2. Minute
- 3. Power reserve indicator

HOROLOGICAL MACHINE N²4

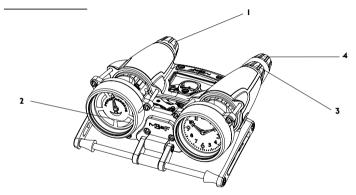

Operating instructions

Winding

Your watch is equipped with a manual winding movement. If it has stopped, wind the crown (I.) till the maximum power reserve capacity (2.)
Warning: do not try to slide the crown out!

Time setting

- 3. "In" position: normal position when wearing the watch.
- "Out" position: turn the crown anticlockwise and slide it fully out.
 Turn the crown to correct the time.

