

MB&F

HOROLOGICAL LAB

LEGACY MACHINE THUNDERDOME

LEGACY MACHINE THUNDERDOME


FUNCTIONS

05

OPERATING INSTRUCTIONS - WINDING & TIME SETTING

07


LEGACY MACHINE THUNDERDOME

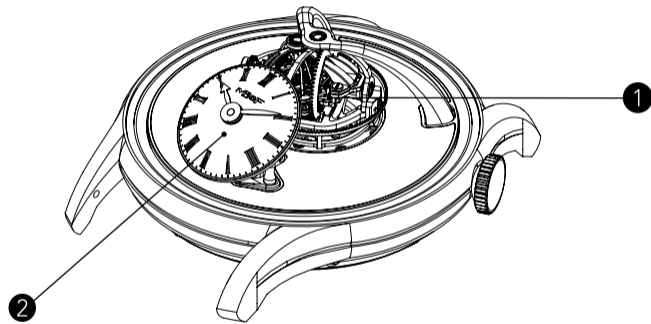

FUNCTIONS

- 1 3 axes regulating mechanism
- 2 Hours and minutes

LEGACY MACHINE THUNDERDOME

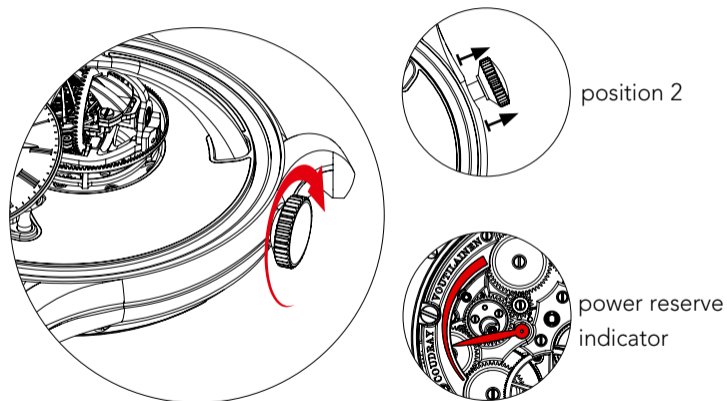

OPERATING INSTRUCTIONS - WINDING

Your watch is equipped with a manual winding movement, with triple mainspring barrels.

If it has stopped, wind the movement by turning the crown several times **clockwise**. The power reserve indicator is visible at the back.

OPERATING INSTRUCTIONS - TIME SETTING

Pull the crown "out" (position 2) and rotate to set the time. The time can be set forwards or backwards by rotating clockwise or anti-clockwise.

